LAST UPDATED: 9/10/2022

How to Un-Brick Other-OEM Devices from Boot-Loop

Last

Requirements

- A Windows PC running W7SP1 Or Later (Windows 10 Recommended)

LAST UPDATED: 9/10/2022

Table of Contents.....

1) Introduction Page 02

2) Preparations Page 03

3) Identifying & Downloading Device FFU Page 03

4) How to Recover the device Page 04

5) Additional Notes Page 07

6) Credits Page 07

Lasitha Samarasinghe

Introduction

This guide will help you to recover your Device that is stuck in a boot loop.

If you are wondering what a boot-loop is, it's a device which does rebooting over and over before loading the OS.

It can be;

- Showing NOKIA/Microsoft or Manufacturer logo and then keep rebooting when get to that screen always.
- Showing Manufacturer logo and then booting to Cogs and then rebooting always to that screen.
- Showing Manufacturer logo, then showing Windows Logo and then rebooting always at that stage.

DISCLAIMER

We are not responsible for any damage happens to your phone during the Process, do it at your own risk & follow the Guide to the letter.

Preparations

Windows Phone Image Designer

> Download Windows Phone Image Designer (WPID)

Mega.nz

Identifying & Downloading Device FFU

If you don't already have the FFU of your Device, you can download it from below Guide.

How to Download WP FFU & Emergency Files

Mega.nz

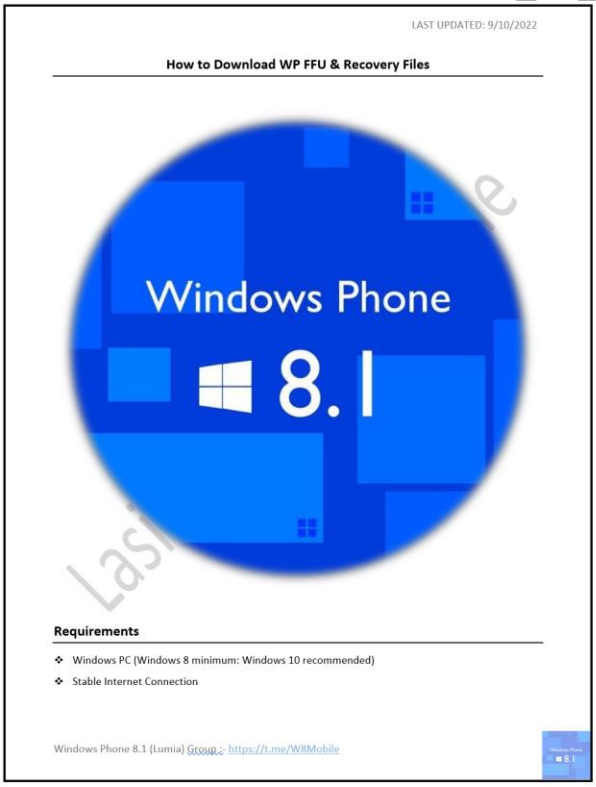
LAST UPDATED: 9/10/2022

How to Download WP FFU & Recovery Files

Windows Phone 8.1

Requirements

- Windows PC (Windows 8 minimum: Windows 10 recommended)
- Stable Internet Connection

Windows Phone 8.1 (Lumia) Group :- https://t.me/W8Mobile

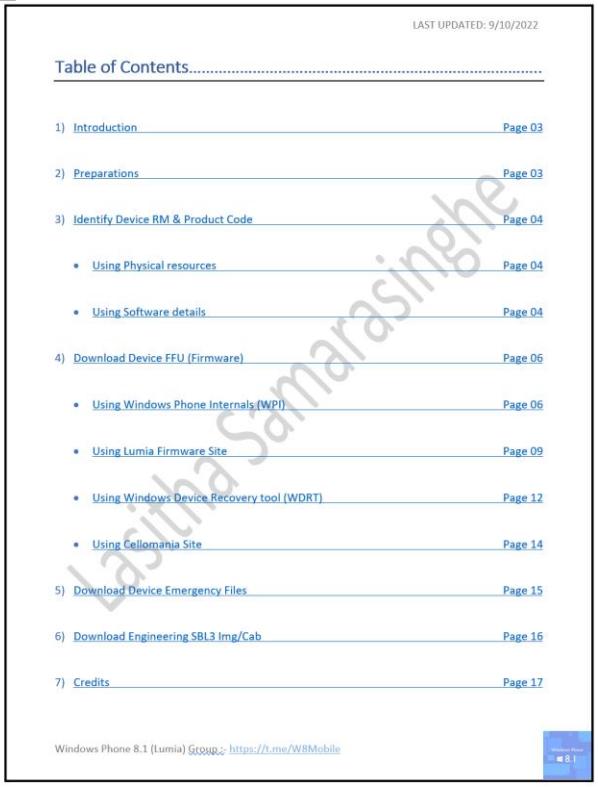
LAST UPDATED: 9/10/2022

Table of Contents

1) Introduction Page 03
2) Preparations Page 03
3) Identify Device RM & Product Code Page 04
   - Using Physical resources Page 04
   - Using Software details Page 04
4) Download Device FFU (Firmware) Page 06
   - Using Windows Phone Internals (WPI) Page 06
   - Using Lumia Firmware Site Page 09
   - Using Windows Device Recovery tool (WDRT) Page 12
   - Using Cellomania Site Page 14
5) Download Device Emergency Files Page 15
6) Download Engineering SBL3 Img/Cab Page 16
7) Credits Page 17

Windows Phone 8.1 (Lumia) Group :- https://t.me/W8Mobile

Windows Phone 8.1 (Lumia) Group: https://t.me/W8Mobile

Lasitha Samarasinghe

How to Recover your Other-OEM Device

> Power OFF your Windows Phone and turn it ON.

Press and hold the “Volume UP” button until you boot to FFULoader (Black screen with lightning & Bolt Icon)

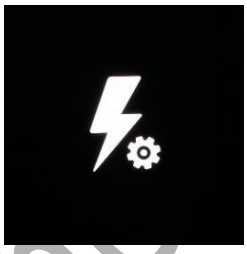

> When the above screen is shown in Phone, connect it to PC using a USB cable.

> Now go to where you extracted WPID which you have downloaded in Preparations step.

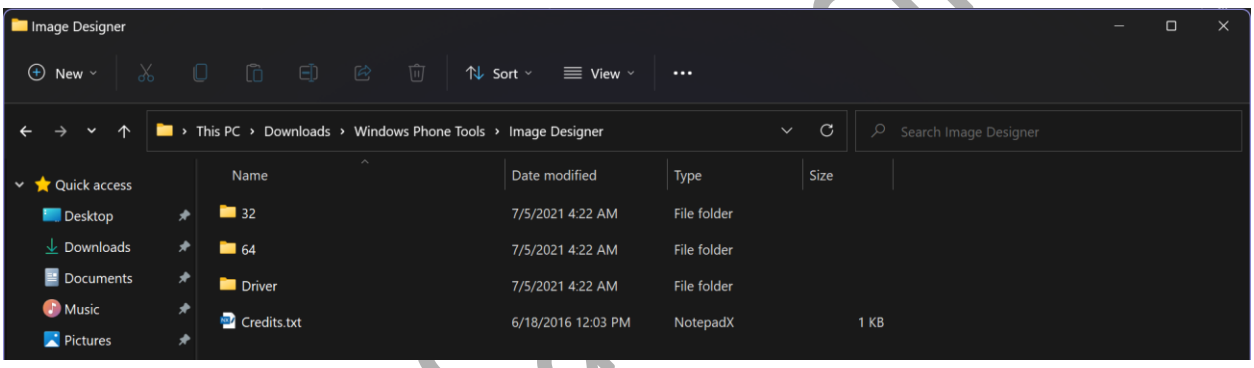

> If your PC is **64bit**, go to “**64 → Image designer**”, if it’s **32bit**, go to “**32 → Image Designer**”

Then run the **“start.bat”** file to start the software.

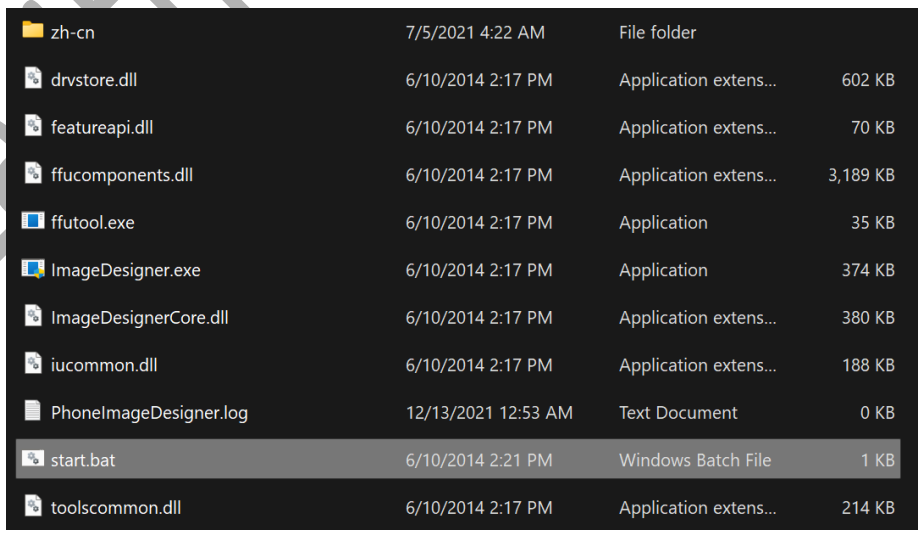

> In the opened tool, select third option and click next.

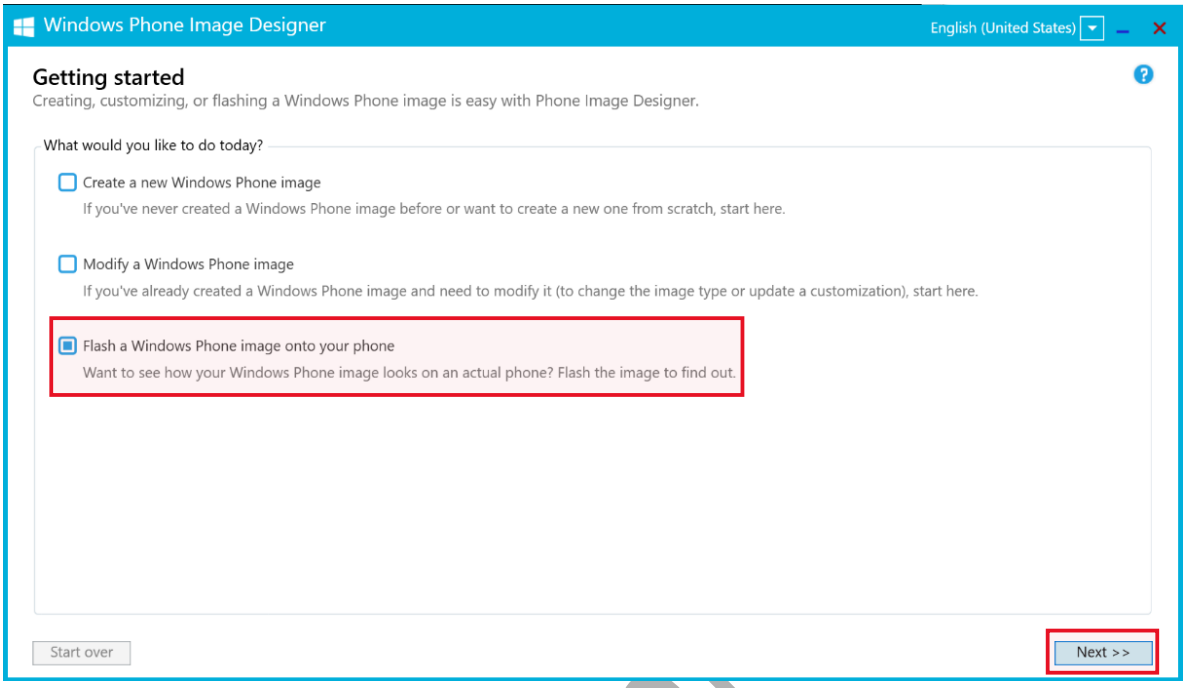

> Your Device should appear in **"Flashable Devices"** (If it's not, you are not in FFULoader, boot to it)

Now click on "Change" text to select the **.FFU** File of your device.

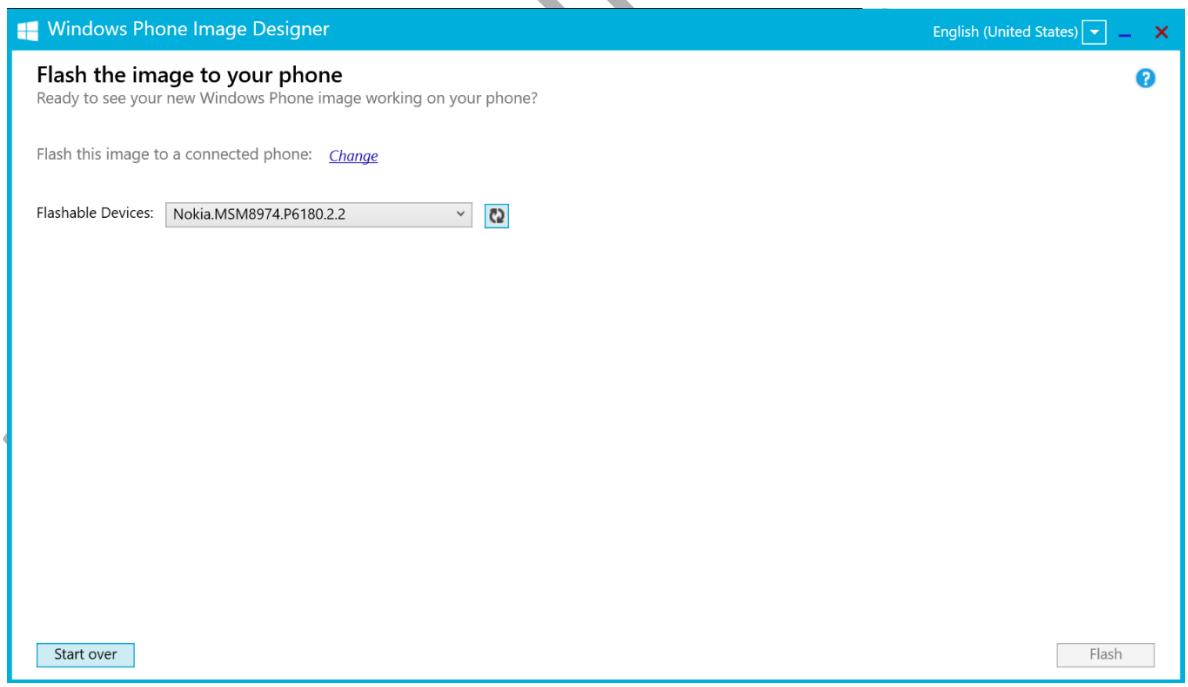

After selecting, press **"Flash"** button.

Windows Phone 8.1 (Lumia) Group: https://t.me/W8Mobile

> Then it will start flashing the device.

The progress will only be shown in the software, the phone will still remain in the same window but it's still flashing to phone in background so don't do anything in phone nor PC.

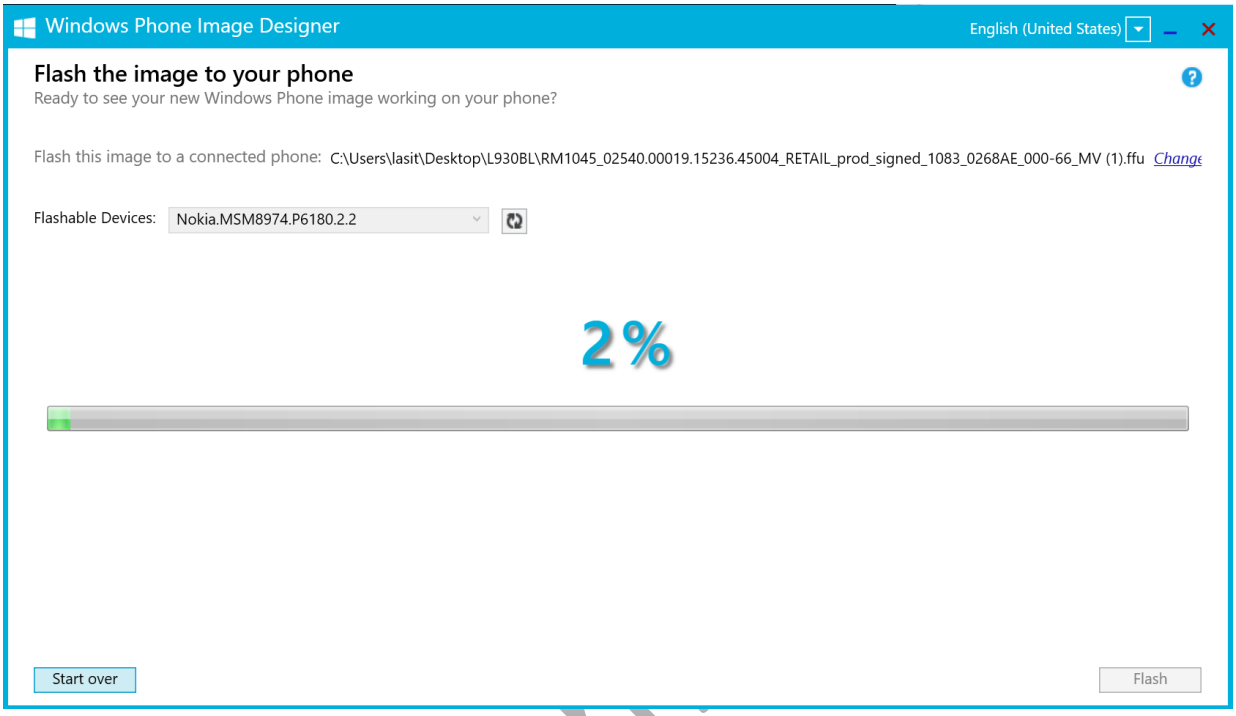

> When finished, your phone will boot to the newly flashed OS.

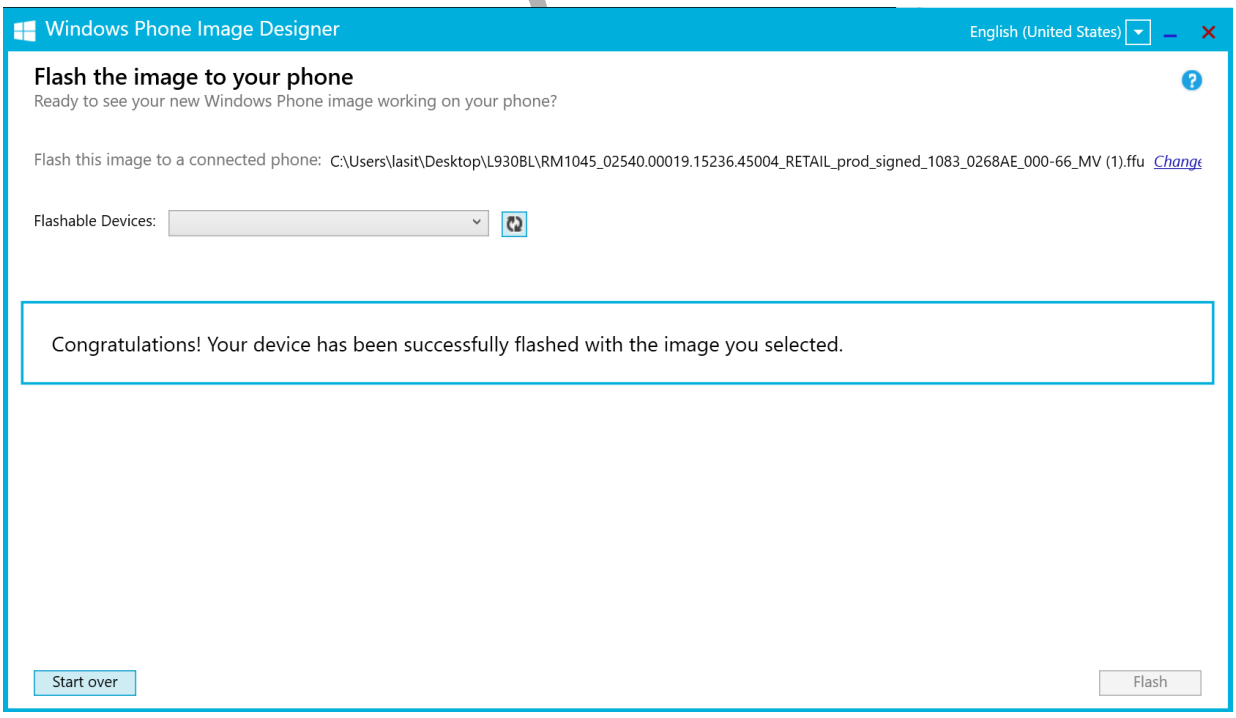

Additional Notes

- Don’t ever Disconnect the phone while flashing !
- Don’t use Custom FFU to flash in these ways.

Credits

✓ Developer of WPID

Thank you !

_____Lasitha Samarasinghe_____

Lasitha Samarasinghe